






THE SMART SOLUTION

Wireless Keyboard



   XXX51855
XXX53801
XXX53815
Version 1/2011

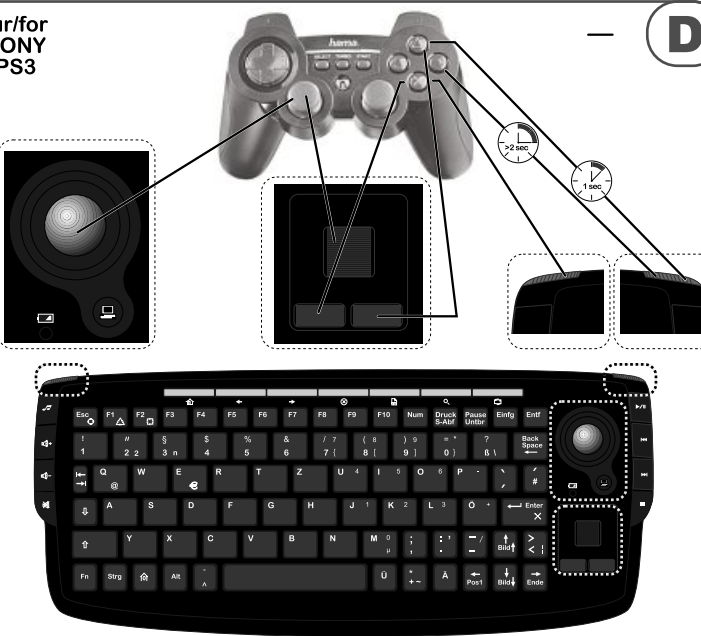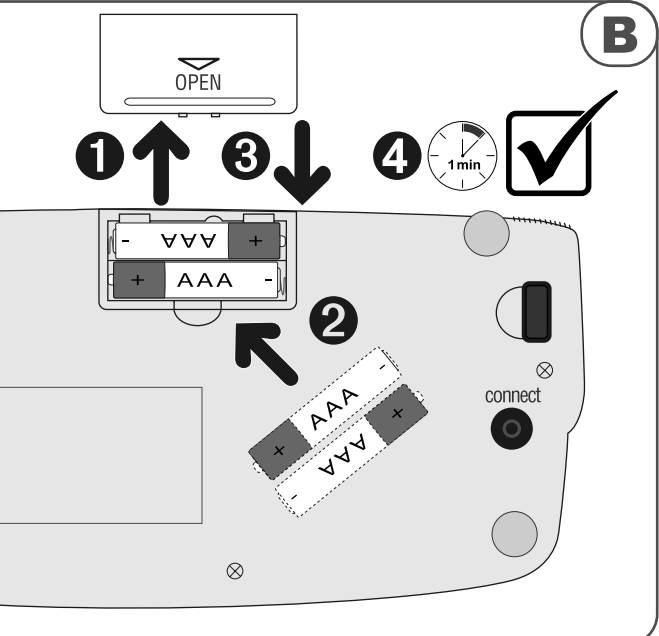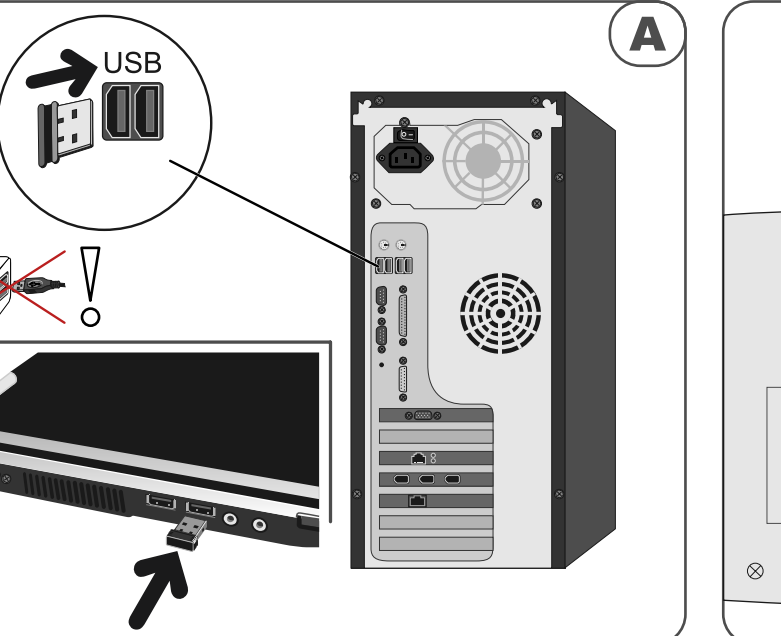

für/for SONY PS3

XMB™ menü

Game
Network
PlayStation®Network
Friends

Important consumer notices | How to use guide | Copyright and trademark
Manual index | Support | Back to product | Language selection

 
 
network menü

Internet Browser
Basic operation of the Internet browser
Browse mode / window mode
Browse mode menu
Window mode menu
Change the display size of a Web page
Using short keys / mouse / keyboard
Load / Download
Internet Browser User Agreement
Internet Search

shortcut key

Using short keys
You can operate directly with the buttons of the wireless controller without the menu. Operation available varies between browse mode and window mode.

Browse mode
× button: Open the link.
× button (hold down): Open the link in a new window.

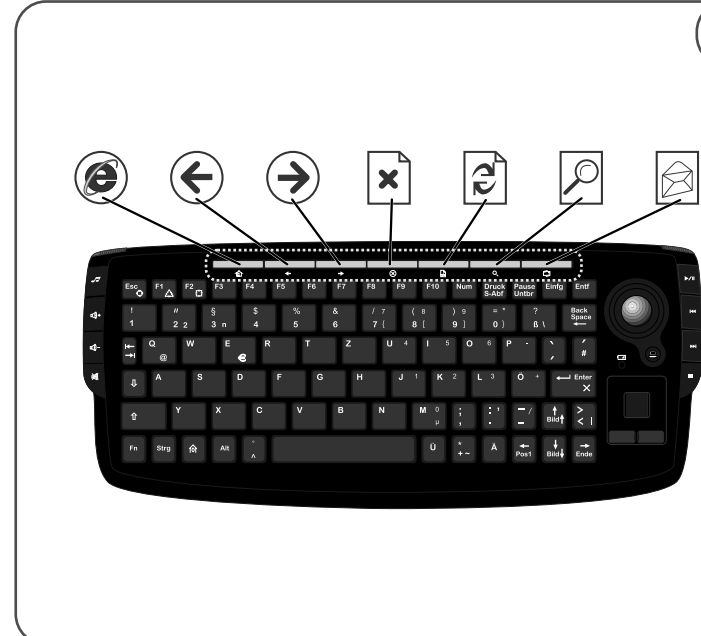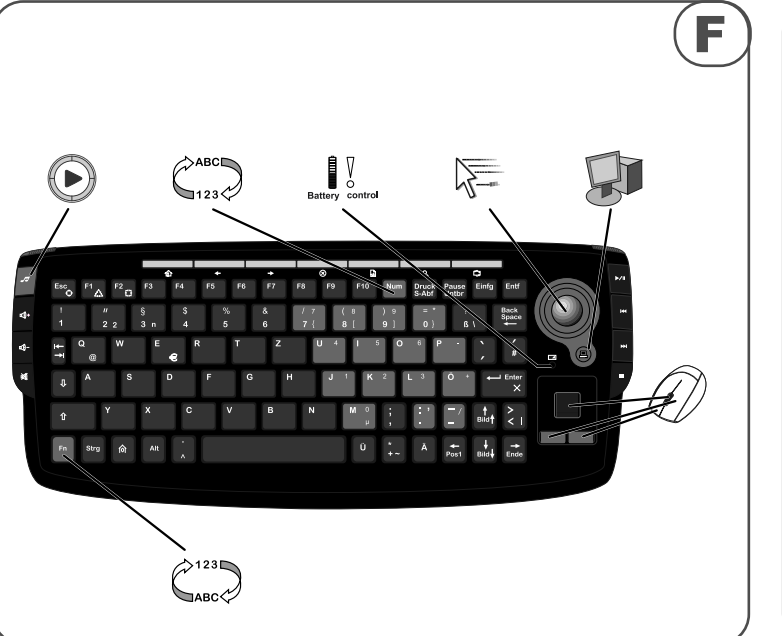



Hama GmbH & Co. KG
D-86652 Monheim
www.hama.com

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.



